

E531D-1F Installation Instructions


Instructions:

1. Remove existing spout. Clean threads on pipe with steel wool or wire brush.
2. Make sure that pipe nipple extends 4-1/2" from wall face.
3. Using Teflon™ pipe tape on the male threads, install the new spout.

CAUTION: When installing spout, DO NOT use lift knob for leverage, damage may result. Tighten by hand only.

4. To operate, lift knob for shower.

Unthread
Desentrañar

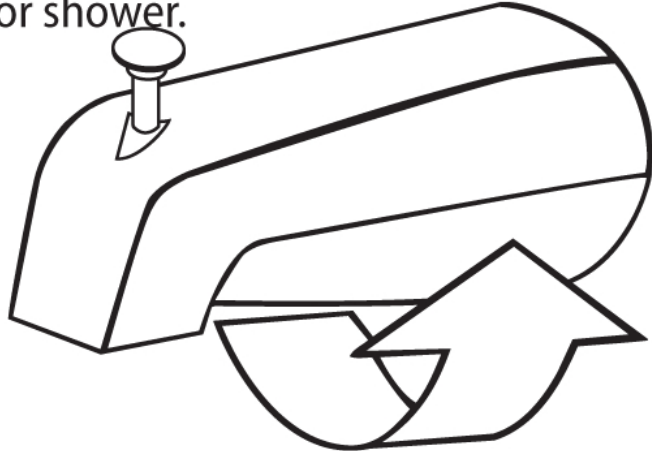

Instrucciones:

1. Sacar la canilla existente y limpiar los filetes de la rosca del caño con lana de acero o cepillo de alambre.
2. Verificar que el conector del caño sobresalga 4-1/2" de la pared.
3. Aplicar cinta de Teflon™ o sellante de rosca en los filetes de la rosca macho e instalar la nueva canilla

PRECAUCIÓN: Al instalar la canilla, NO USAR como apoyo el mango de levante ya que podría dañar la unidad. Ajustar a mano únicamente.

4. Para accionar la canilla derivadora, levantar el mango para habilitar la ducha.