


# R2082

## INSTRUCTIONS:

1. Support disposal unit with one hand and inset wrenchette or flat blade screwdriver into mounting lug on lower ring and turn ring to left until disposer is free.
2. Loosen the three mounting screws and remove the snap ring to remove the mounting assembly.
3. Apply silicone sealant around hole and push new flange into hole evenly on silicone. Remove excess silicone from hole.
4. Reattach snap ring and mounting assembly, tightening the three bolts evenly.
5. Align the mounting tabs with the tracks and turn lower mounting ring until tabs lock over ridges.

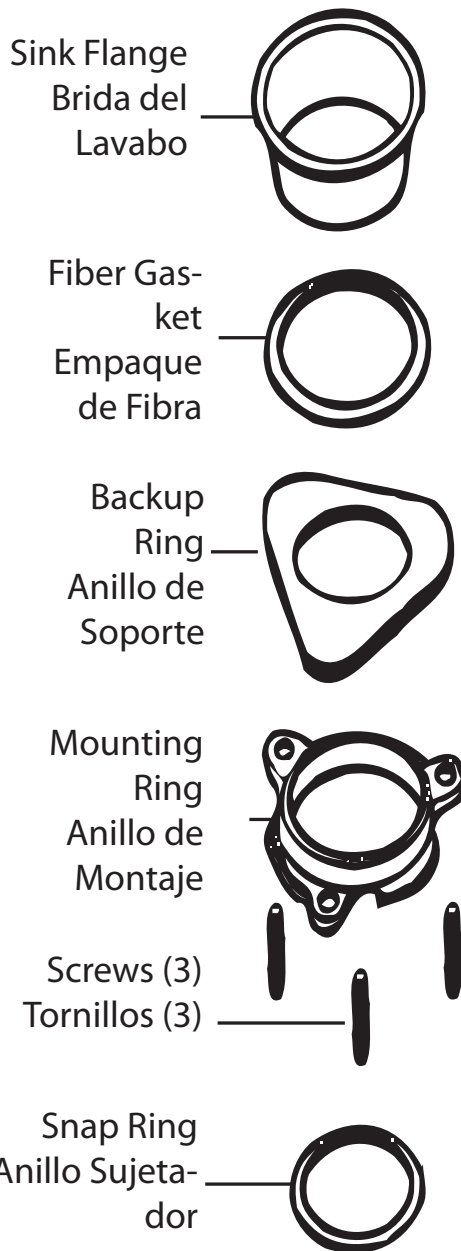

## INSTRUCCIONES:

1. Sostenga la unidad del triturador con una mano e inserte una llave pequeña o desarmador plano en la aleta del montaje del anillo inferior y gire el anillo hacia la izquierda hasta que el triturador esté separado.
2. Quite los 3 tornillos del montaje y saque el anillo sujetador y retire el conjunto de montaje.
3. Aplique silicona alrededor del orificio y empuje la brida nueva a través del orificio. Retire el exceso de silicona del orificio.
4. Reinstale el anillo y el conjunto de soporte, ajustando los 3 tornillos uniformemente.
5. Alinee las pestañas del montaje con las ranuras y gire el anillo inferior hasta que las pestañas cierren sobre las aristas.